


SmartGen

MAKING CONTROL SMARTER

HAT162 ATS CONTROLLER USER MANUAL

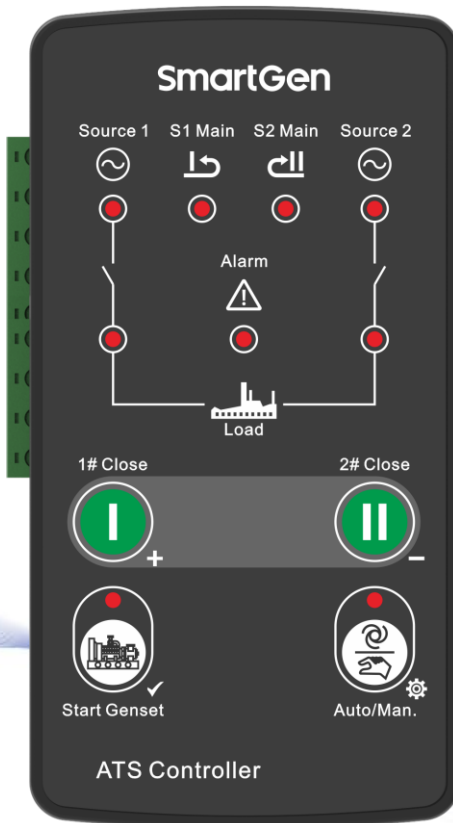

郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen 众智 Chinese trademark

SmartGen English trademark

SmartGen – make your generator *smart*

SmartGen Technology Co., Ltd.

No. 28 Jinsuo Road

Zhengzhou

Henan Province

P. R. China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn/

www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.

SmartGen Technology reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Content
2018-05-10	1.0	Original release.
2022-08-09	1.1	Update company logo and manual format.

CONTENTS

1. OVERVIEW.....	4
2. PERFORMANCE AND CHARACTERISTICS.....	4
3. SPECIFICATION	5
4. OPERATION.....	6
4.1 FRONT PANEL DESCRIPTION.....	6
4.2 KEY FUNCTION DESCRIPTION	6
4.3 INDICATOR DESCRIPTION	7
4.4 OPERATION.....	7
4.4.1 AUTO/MANUAL MODE SWITCH	7
4.4.2 MANUAL OPERATION.....	7
4.4.3 AUTO OPERATION.....	8
4.4.4 MANUAL TEST.....	8
5. CLOSE FAULT ALARM.....	8
6. WIRE CONNECTION.....	9
7. DEFINITION AND RANGE OF PARAMETERS.....	10
8. PARAMETERS SETTING.....	13
8.1 PARAMETERS SETTING MODE	13
8.2 PARAMETERS SETTING.....	13
8.3 RESET TO DEFAULT	14
9. TYPICAL APPLICATION	15
10. OVERALL DIMENSION AND PANEL CUTOUT	19
10.1 CASE DIMENSION	19
10.2 CUTOUT DIMENSION	19
10.3 INSTALLATION.....	20
11. TROUBLESHOOTING.....	21

1. OVERVIEW

HAT162 ATS Controller is suitable for no breaking two stage ATS. It can accurately detect 2-way-3-phase voltage and judge voltage abnormal (such as over voltage, under voltage, over frequency, under frequency, lack of phase and phase rotation), and then control ATS to switch. When ATS switches abnormally, the controller can detect close/open failure and alarm on the front panel to ensure the correct action of ATS. In auto mode, if source 1 failure, controller will send signal to start the genset. Moreover, it can also realize remote communication, remote control and parameter configuration functions via LINK port communication.

2. PERFORMANCE AND CHARACTERISTICS

HAT162 controller can detect 2-way voltage (2-way mains, 1-way mains and 1-way gen) and control ATS.

Mains characters are as below,

- It is suitable for AC system with 3-phase 4-wire, 2-phase 3-wire, single phase, 3-phase 3-wire (special order required);
- “1# Main (auto transfer and restore)”, “2# Main (auto transfer and restore)”, and “No Main Use (auto transfer and non-auto restore)” power supply methods;
- Measuring and displaying 2-way voltage and frequency:

1#	2#
Phase voltage (Ua, Ub, Uc)	Phase voltage (Ua, Ub, Uc)
Line voltage (Uab, Ubc, Uca)	Line voltage (Uab, Ubc, Uca)
Frequency Hz	Frequency Hz

- With over/under voltage, over/under frequency, loss of phase, and reverse phase sequence detection functions;
- Breaker close fail alarm indication;
- LEDs on the panel can clearly display ATS working status;
- Auto/Manual mode can be switched. In manual mode, ATS can be switched by pressing front panel button;
- With manual commissioning function;
- Applicable for 2 isolated neutral line.
- Close output can be configured as pulse and continuous output;
- Parameter setting: parts of parameters can be adjust from front panel; all can be adjust via LINK port (with SG72 adaptor) by using computer software;
- Digitization adjustment of parameters (abandon simulation adjustment of regular potentiometer, and enhanced reliability and stability);
- Modular design, self-extinguishing ABS+PC plastic shell, pluggable terminal, and compact structure;
- Three installation ways: panel built-in, internal 35mm guide rail installation and screw mounting.

3. SPECIFICATION

Table 2 Specification Parameters

Items	Contents
Operating Voltage	AC power A1N1/A2N2 supply. Rated AC240V (range: AC170V~277V)
Power Consumption	Under rated voltage, power consumption is not more than 3VA
AC Voltage Input:	
3-phase 4-wire	AC170V – AC277V (ph-N)
2-phase 3-wire	AC170V – AC277V (ph-N)
Single phase 2-wire	AC170V – AC277V (ph-N)
3-phase 3-wire	AC170V – AC277V (ph-ph) (special order required)
AC Frequency	50/60Hz
1# Close Relay	16A AC250V Volt free output (Normally open)
2# Close Relay	16A AC250V Volt free output (Normally open)
Oil Engine Start Relay	7A AC250V Volt free output (Normally close)
Programmable Output Relay	7A AC250V Volt free output (Normally open)
Communication	LINK interface, MODBUS-RTU Protocol
Case Dimensions	86.9mmx158mmx119.5mm
Panel Cutout	73.5mmx144mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-25~+70)°C
Protection Level	IP65: when water-proof gasket installed between control panel and enclosure.
Insulation Strength	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal; The leakage current is not more than 3mA within 1min.
Weight	0.6kg

4. OPERATION

4.1 FRONT PANEL DESCRIPTION

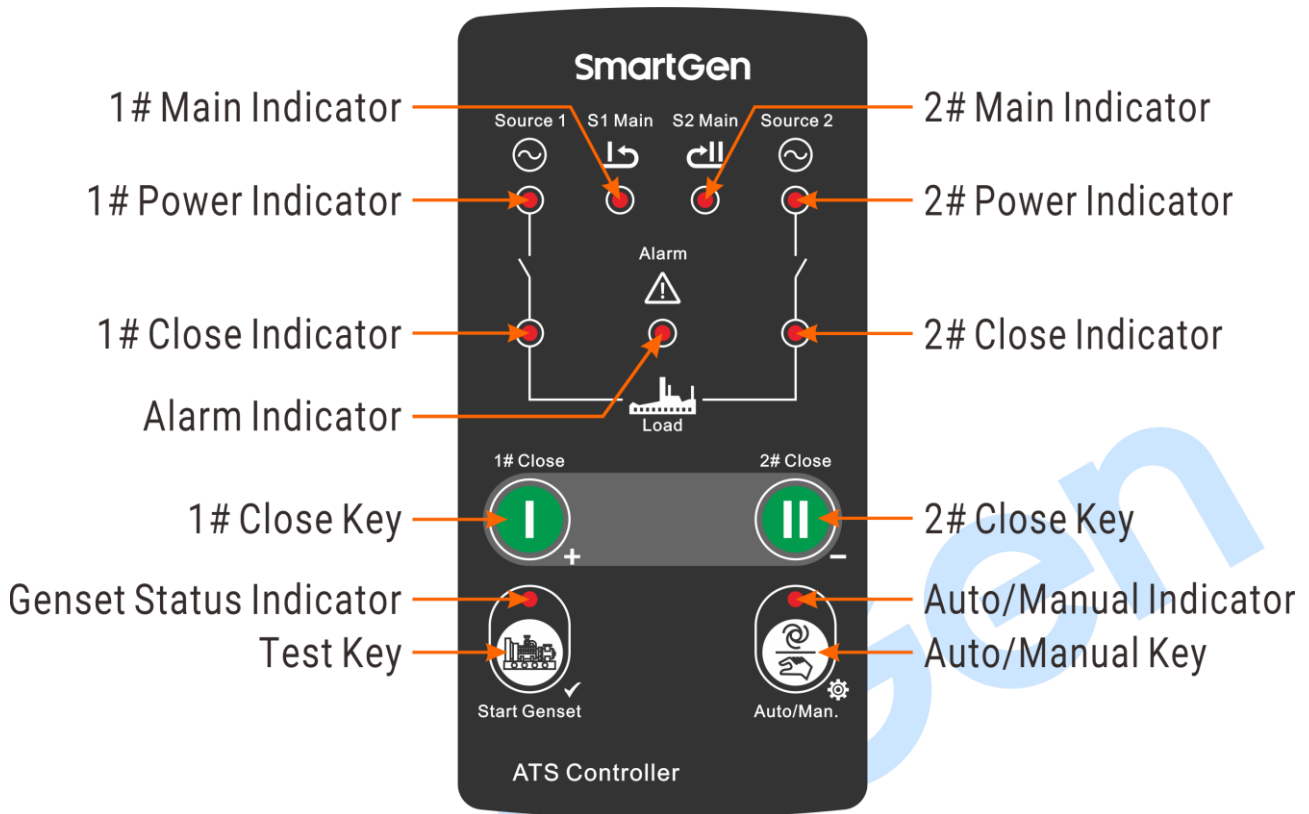


Fig.1 Front Panel Description

4.2 KEY FUNCTION DESCRIPTION

Table 3 Keys Description

Icon	Function	Description
	Auto (Set)	Auto/Manual mode switch; Enter into lamp test status by pressing for 3s; Enter into parameter configuration mode by pressing for 8s.
	1# Close (Increase)	1# close in manual mode; Adjust parameters in parameter configuration mode.
	2# Close (Decrease)	2# close in manual mode; Adjust parameters in parameter configuration mode.
	Test (Confirm)	It is active in manual mode; While genset start signal is active, press it can deactivate the genset start signal; While genset start signal is inactive, press it can activate the genset start signal; Confirm user-defined parameters in parameter setting screen.



4.3 INDICATOR DESCRIPTION

Table 4 Indicator Description

Indicators	Description	
1# Power ●	Lamp illuminates: 1# power normal; Lamp flashes: 1# power abnormal (over/under voltage, over/under frequency, loss of phase, and reverse phase sequence); Lamp off: 1# loss of power.	
2# Power ●	Lamp illuminates: 2# power normal; Lamp flashes: 2# power abnormal (over/under voltage, over/under frequency, loss of phase, and reverse phase sequence); Lamp off: 2# loss of power.	
1# Main ●	Lamp illuminates: 1# Priority (auto transfer and restore).	Both illuminate: "mutual backup (auto transfer and non-restore)".
2# Main ●	Lamp illuminates: 2# Priority (auto transfer and restore).	
1# Close ●	Lamp illuminates: 1# Supply.	
2# Close ●	Lamp illuminates: 2# Supply.	
Alarm ●	Lamp illuminates: 1# or 2# Close fault.	
Auto/Manual Mode ●	Lamp illuminates: controller in Auto mode; Lamp off: controller in Manual mode.	
Genset Status ●	Lamp illuminates: genset start signal outputs; Lamp flashes: genset start signal not output.	



4.4 OPERATION

4.4.1 AUTO/MANUAL MODE SWITCH

When the controller is normally working, if auto/manual mode indicator is off, it means controller is in manual mode; it can switch into auto mode by pressing , the indicator will be normally light; then press  again to switch back to manual mode.

▲NOTE: After repower-on, controller mode depends on the mode in which the controller was last powered down. When the controller is powered off in manual mode, the controller is still in manual mode after repower-on.



4.4.2 MANUAL OPERATION

When controller is in manual mode, if press , 1# close relay outputs, and 1# close status indicator illuminated when 1# close status input detecting is active, and then 1# supply ramps on load; if press , 2# close relay outputs, and 2# close status indicator illuminated when 2# close status input detecting is active, and then 2# supply ramps on load.

4.4.3 AUTO OPERATION

In auto mode, controller can switch between 1# supply and 2# supply automatically.

4.4.4 MANUAL TEST

In manual mode, when genset start signal is active, press  can deactivate the genset start signal. When genset start signal is inactive, press  can active the genset start signal.

5. CLOSE FAULT ALARM

Breaker close fault is divided into 1# supply breaker close fault and 2# supply breaker close fault. After the controller send a breaker close fault alarm, alarm indicator flashes.


Process of trigger 1# supply close fault alarm is as below:

When 1# supply voltage is normal, controller will initiate a command of close 1# supply; if 1# close input signal cannot be detected, 1# supply will be open and close again. If controller still cannot detect the 1# close signal, it will be regarded as 1# close failure and the alarm indicator illuminates at the same time. Meanwhile, if 2# supply voltage is normal and doesn't occur close fault, then 2# power will be closed.

Process of trigger 2# supply close fault alarm is as below:

When 2# supply voltage is normal, controller will initiate a command of close 2# supply; if 2# close input signal cannot be detected, 1# supply will be open and close again. If controller still cannot detect the 2# close signal, it will be regarded as 2# close failure and the alarm indicator illuminates at the same time. Meanwhile, if 1# supply voltage is normal and doesn't occur close fault, then 1# power will be closed.

Reset close fault alarm: after alarm occurs, switch controller to manual mode to reset alarm. This moment, troubleshooting and ATS transfer test can be carried out.

 **NOTE:** After reset alarms, the fault must be checked and cleared.

6. WIRE CONNECTION

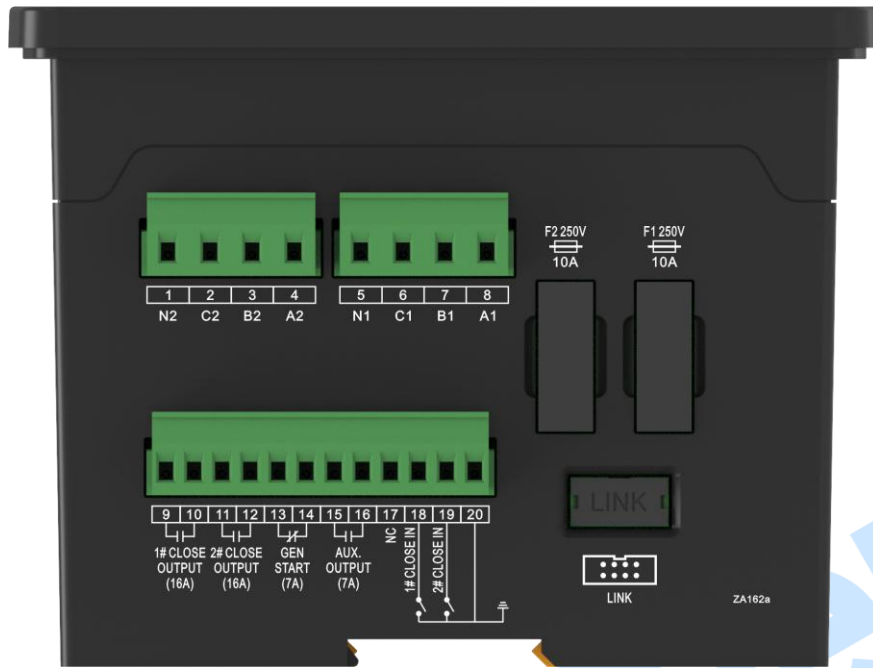


Fig.2 Controller Rear Panel Drawing

Table 5 Terminals Description

No.	Items	Function Description	Remark
1	N2	2# AC 3-phase 4-wire input	Single phase 2-wire: connect with A2 and N2, B2 and C2 are not connected; 2-phase 3-wire: connect with A2, B2, and N2, C2 is not connected; 3-phase 3-wire: connect with A2, B2, and C2, N2 is not connected (special order required).
2	C2		
3	B2		
4	A2		
5	N1	1# AC 3-phase 4-wire input	Single phase 2-wire: connect with A1 and N1, B1 and C1 are not connected; 2-phase 3-wire: connect with A1, B1, and N1, C1 is not connected; 3-phase 3-wire: connect with A1, B1, and C1, N1 is not connected (special order required).
6	C1		
7	B1		
8	A1		
9	1# Close Relay	Volt free normally open contact output	Rated capacity: 16A/250VAC
10			
11	2# Close Relay	Volt free normally open contact output	Rated capacity: 16A/250VAC
12			
13	Gen Start Signal output	Volt free normally close contact output	Rated capacity: 7A/250VAC
14			
15	Aux. output	Volt free normally open contact output	Rated capacity: 7A/250VAC
16			
17	NC		Not connect

No.	Items	Function Description	Remark
18	1# Close Input	Detect 1# breaker close status, auxiliary contact input.	Ground is active.
19	2# Close Input	Detect 2# breaker close status, auxiliary contact input.	Ground is active.
20	Common Port	GND	
LINK	Communication Port	Communicate with PC and used for program update	Used with SG72 adaptor.
F1	Fuse		Rated 10A 250V.
F2	Fuse		Rated 10A 250V.

7. DEFINITION AND RANGE OF PARAMETERS

Table 6 Parameters Definition and Range Table (1)

No.	Items	Range	Default	Description
1	AC System	(1-4)	1	1: 3 Phase, 4 Wire (3P4W) 2: Single Phase, 2 Wire (1P2W) 3: 3 Phase, 3 Wire (3P3W) (special order required) 4: 2 Phase, 3 Wire (2P3W)
2	S1 Normal Delay	(1-7)	2	1: 1s 2: 5s 3: 10s 4: 20s 5: 30s 6: 45s 7: User defined (Default: 5s)
3	S2 Normal Delay	(1-7)	2	1: 1s 2: 5s 3: 10s 4: 20s 5: 30s 6: 45s 7: User defined (Default: 5s)
4	S1 Abnormal Delay	(1-7)	2	1: 1s 2: 5s 3: 10s 4: 20s 5: 30s 6: 45s 7: User defined (Default: 5s)
5	S2 Abnormal Delay	(1-7)	2	1: 1s 2: 5s

No.	Items	Range	Default	Description
				3: 10s 4: 20s 5: 30s 6: 45s 7: User defined (Default: 5s)
6	Close Delay	(1-7)	4	1: Continuous Close Enabled 2: 1s 3: 3s 4: 5s 5: 8s 6: 10s 7: User defined (Default: 5s)
7	Again Open Delay	(1-7)	2	1: 1s 2: 3s 3: 5s 4: 8s 5: 10s 6: 15s 7: User defined (Default: 3s)
8	Transfer Delay Expired	(1-7)	1	1: 0.5s 2: 1s 3: 2s 4: 3s 5: 4s 6: 5s 7: User defined (Default: 0.5s)
9	Gen Start Delay	(1-7)	4	1: 3s 2: 8s 3: 15s 4: 30s 5: 50s 6: 70s 7: User defined (Default: 30s)
10	Gen Stop Delay	(1-7)	6	1: 3s 2: 8s 3: 15s 4: 30s 5: 50s 6: 70s 7: User defined (Default: 90s)
11	Set Priority	(1-3)	1	1: S1 Priority 2: S2 Priority 3: No priority

NOTE:

- a) The parameters in this form can be set via computers and slave;
- b) When delay is "7: User defined", parameter delay must be set via computer. If parameter is not set via computer, the delay is Default; if parameter has been set via computer, then the delay is the set value.




Table 7 Parameters Definition and Range Table (2)

No.	Item	Range	Default	Description
1	Rated Voltage	(170-270)V	230	Provide base for over/under volt judge.
2	Rated Frequency	(50.0-60.0)Hz	50.0	Provide base for over/under frequency judge.
3	Over Voltage Warn	(0-1)	1	0: Disabled 1: Enabled
4	Over Volt Set Value	(100-120)%	115	Threshold value
5	Over Volt Return Value	(100-120)%	113	Return value
6	Under Voltage Warn	(0-1)	1	0: Disabled 1: Enabled
7	Under Volt Set Value	(70-100)%	75	Threshold value
8	Under Volt Return Value	(70-100)%	77	Return value
9	Over Frequency Warn	(0-1)	1	0: Disabled 1: Enabled
10	Over Freq. Set Value	(100-120)%	110	Threshold value
11	Over Freq. Return Value	(100-120)%	104	Return value
12	Under Freq. Warn	(0-1)	1	0: Disabled 1: Enabled
13	Under Freq. Set Value	(80-100)%	90	Threshold value
14	Under Freq. Return Value	(80-100)%	96	Return value
15	Loss of Phase	(0-1)	1	0: Disabled 1: Enabled (fixed delay as 3s)
16	Reverse Phase Seq.	(0-1)	0	0: Disabled 1: Enabled (fixed delay as 3s)
17	Output Ports	(0-16)	0	0: Not Used 1: S1 Volts Normal 2: S1 Volts Abnormal 3: S2 Volts Normal 4: S2 Volts Abnormal 5: Manual Status Output 6: Auto Status Output 7: Gens Start Output(NO) 8: Gens Start Output(NC) 9: S1 Close Output 10: S2 Close Output 11: S1 Close Status Output 12: S2 Close Status Output 13: Reserved 14: Reserved 15: Reserved 16: Reserved
18	Module Address	(1-254)	1	Address that communicates with PC software.

NOTE: The parameters in this form can be set via computers.

8. PARAMETERS SETTING

8.1 PARAMETERS SETTING MODE

In manual mode, enter into parameters setting mode by pressing  for 8s and manual/auto indicator  and gen status indicator  flash; ①, ②, ③, ④ indicators illuminate. LED numbers please to see the following picture.

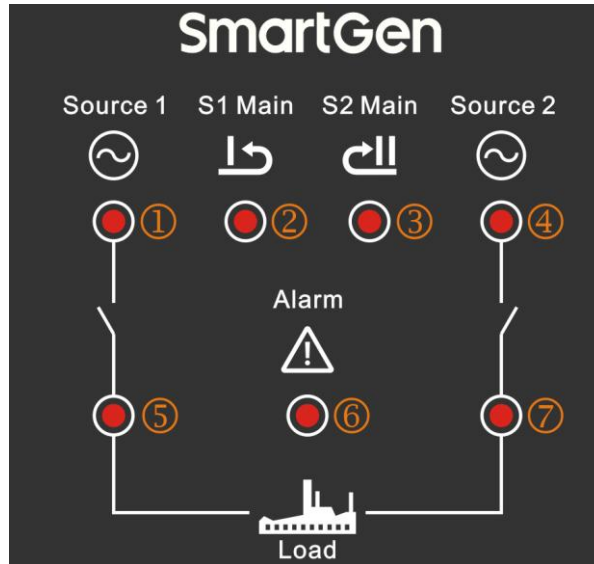











Fig.3 Parameter Configuration

▲NOTE: At this moment, press  will return to normal mode after LED flash.

8.2 PARAMETERS SETTING

When it entered into parameter setting mode, users can adjusting parameters by pressing . And ④ and ⑦ LEDs are illuminated. ①, ②, ③, ④ indicators mean setting items numbers (currently item number is 1); ⑤, ⑥, ⑦ indicators mean these parameter values (currently parameter value is 1). Configurable parameter list please check “Table 6 Parameters Definition and Range Table (1)” of item 7.

Specific settings are as below:

- 1) Select setting number which needs to adjust by pressing  and ;
- 2) Enter into setting status by pressing  and ⑦ indicator flashes;
- 3) After set this parameter by pressing  and , and press the key to save the value.
- 4) Hold and press  after all parameters are configured, and release  when all LEDs flash, which means parameters are all saved and then it will return to normal mode.

▲NOTE: See “Table 8 Parameter Value Comparison” for the values corresponding of LED indicators.


NOTE: After parameters configured completely, users need to press  to back to the normal mode to save the parameters. Otherwise, the setting parameters will be lost after controller power outage.

Table 8 Parameter Value Comparison


Parameter Serial No. LED Indicate				Value	Parameter Value LED Indicate			Value
①	②	③	④		⑤	⑥	⑦	
○	○	○	●	1	○	○	●	1
○	○	●	○	2	○	●	○	2
○	○	●	●	3	○	●	●	3
○	●	○	○	4	●	○	○	4
○	●	○	●	5	●	○	●	5
○	●	●	○	6	●	●	○	6
○	●	●	●	7	●	●	●	7
●	○	○	○	8				
●	○	○	●	9				
●	○	●	○	10				
●	○	●	●	11				

8.3 RESET TO DEFAULT

In parameter setting mode, press , ①, ② and ③ LEDs illuminated, and ⑦ LED flashes.

After pressing , ⑦ LED illuminates for 2s, indicating that the factory value has been restored.

Meanwhile, all LEDs flash for 3 times and return back to the normal mode.

NOTE: If do not need to restore to factory value, press  to return to the normal mode after LED flashes.

9. TYPICAL APPLICATION

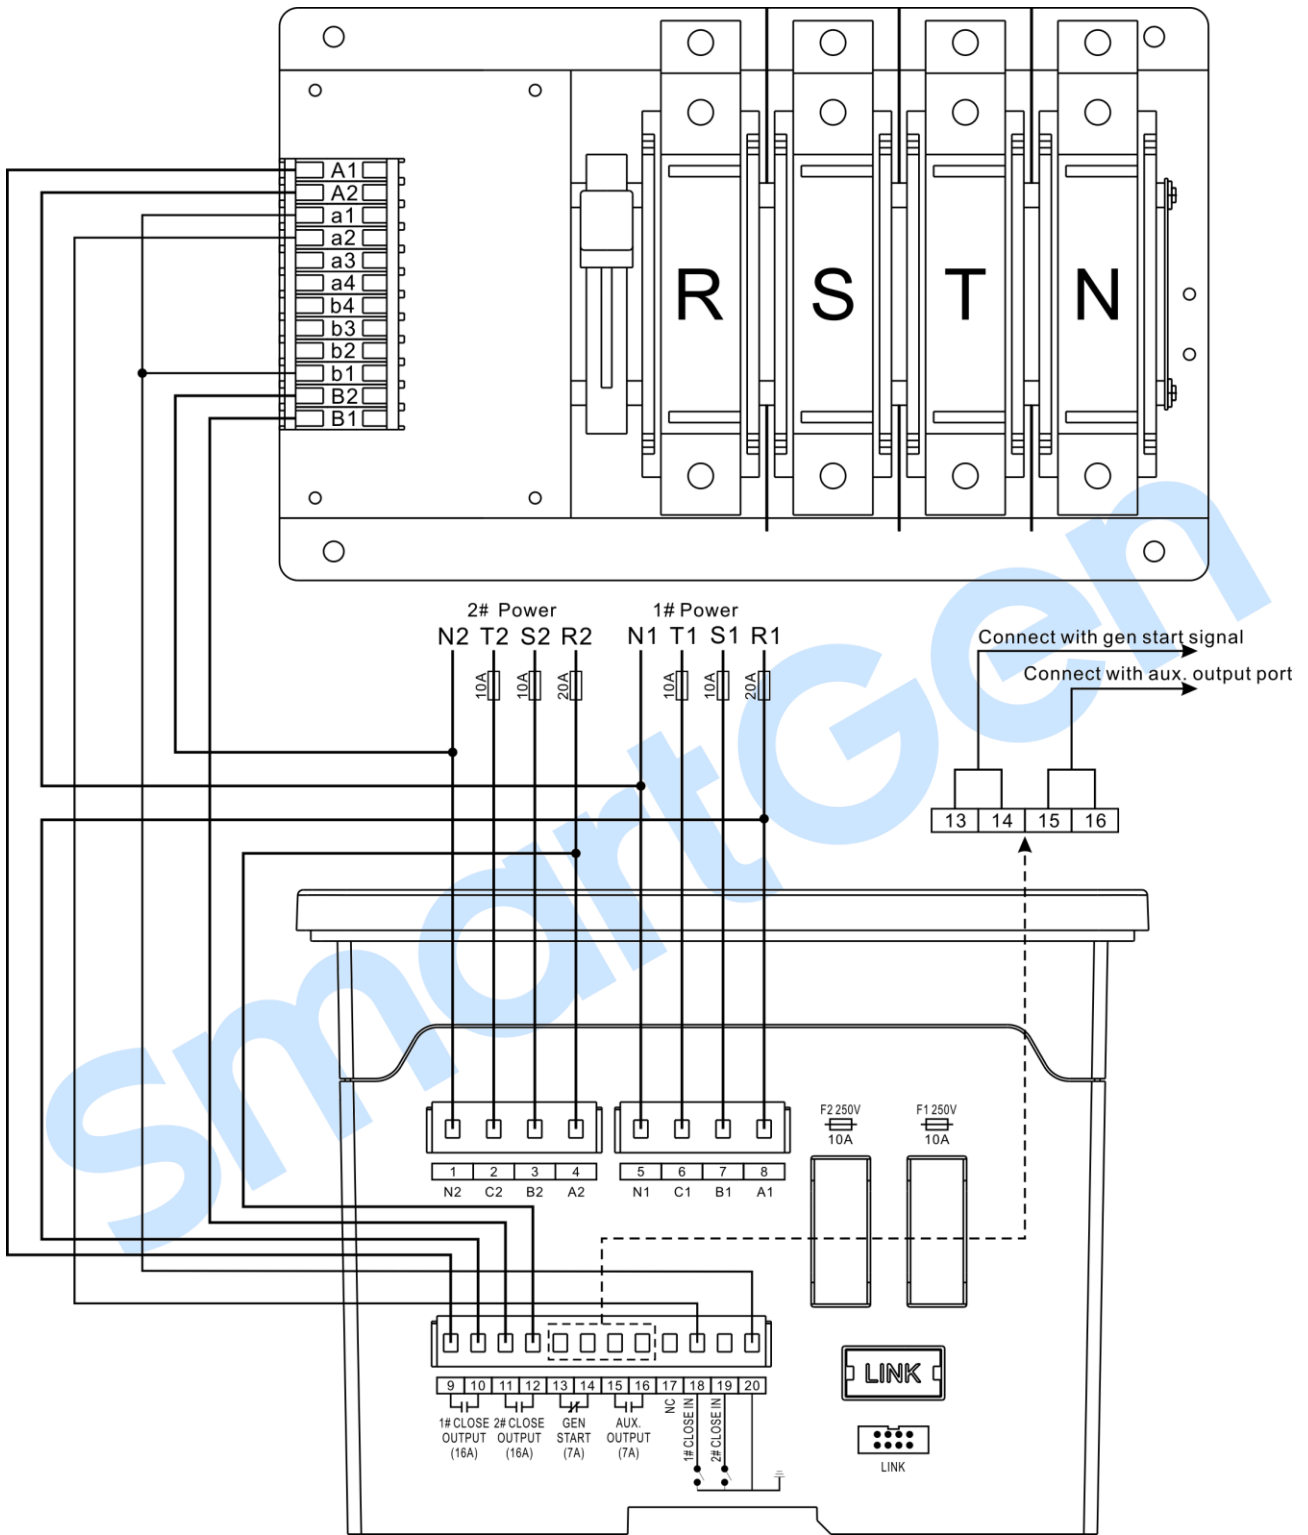


Fig.4 SGQ-N Wire Connection

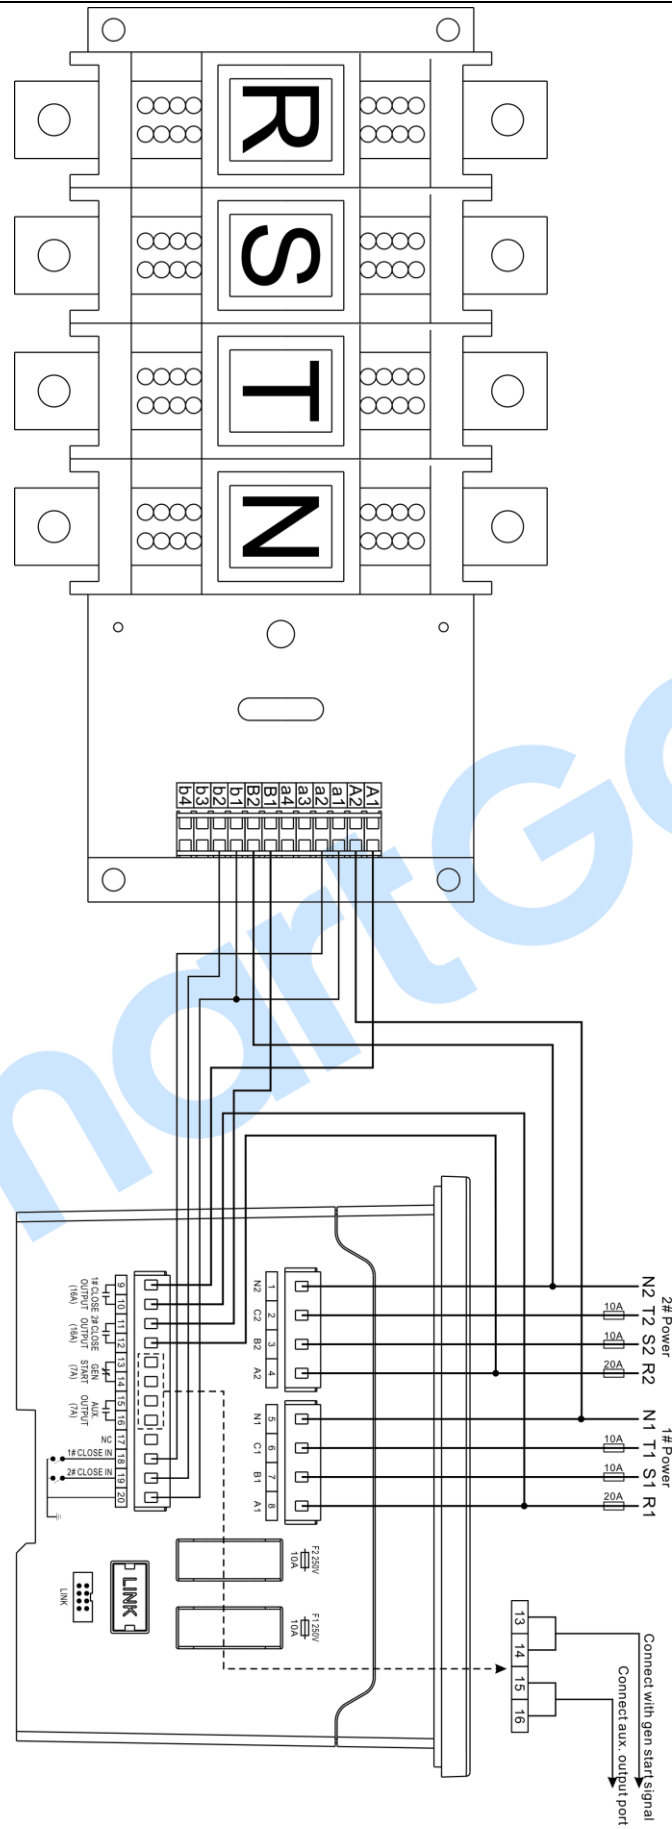


Fig.5 SGQ-T Wire Connection

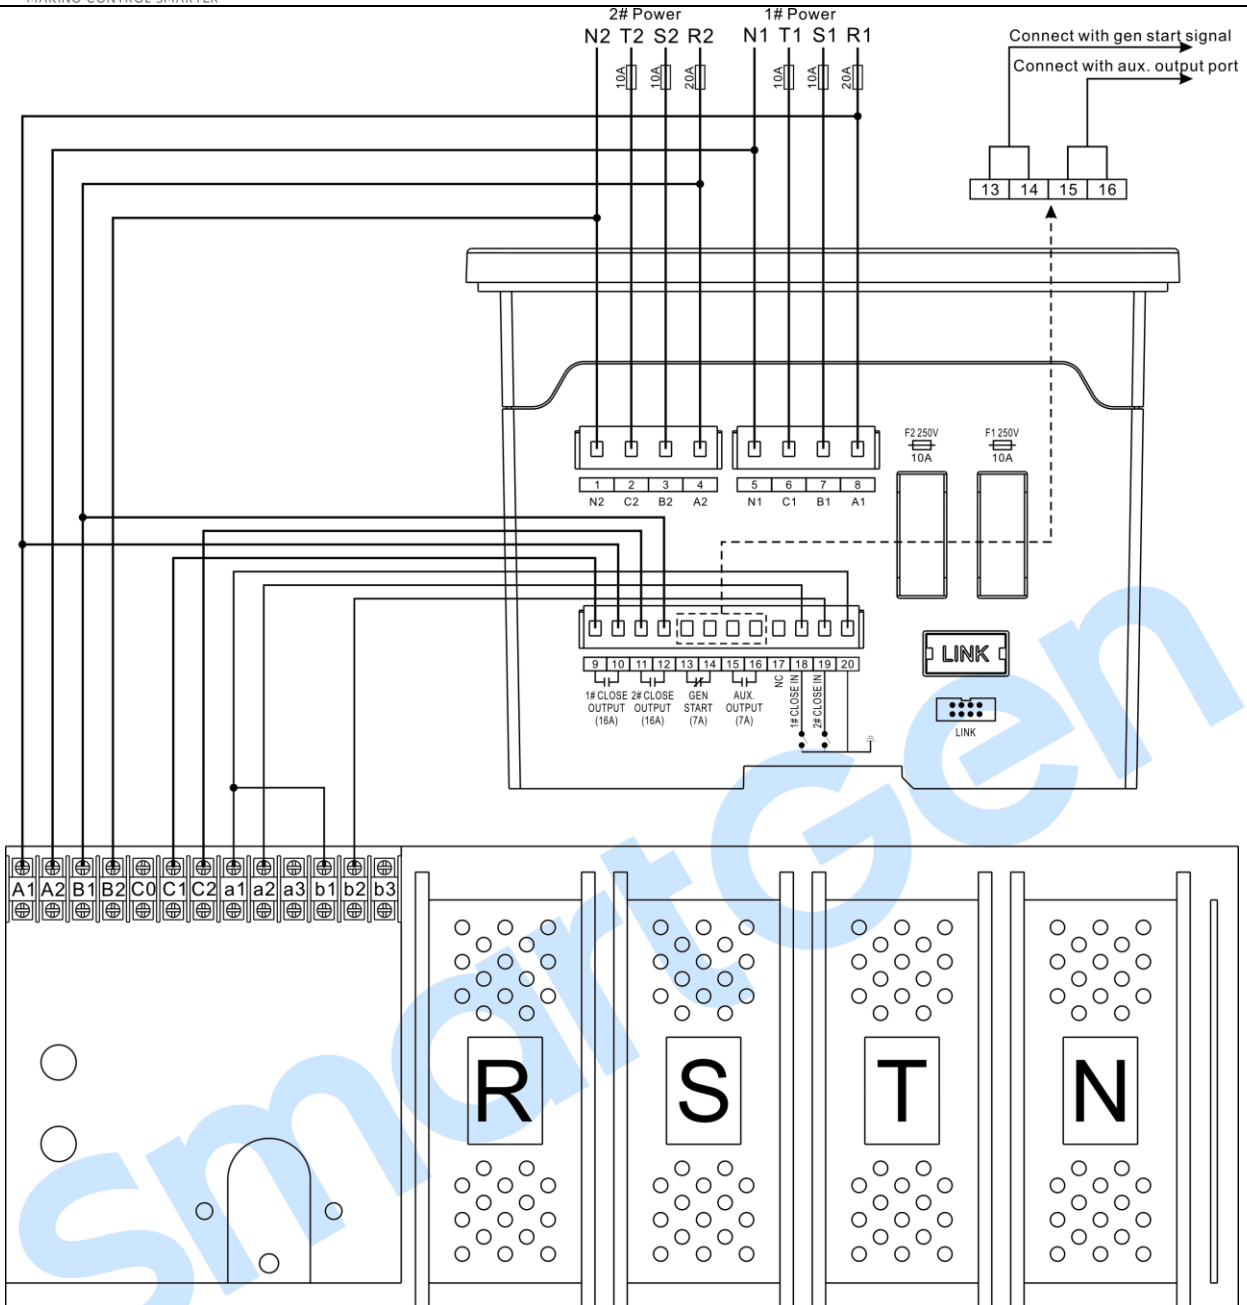


Fig.6 SGQ-M Wire Connection

NOTE: Please refer to the above drawings for wiring. The actual wiring on site is subject to the ATS switch wiring instructions. And the capacity of the fuse should be selected according to the actual power consumption at the site, which cannot be based on the fuse capacity in the drawing.

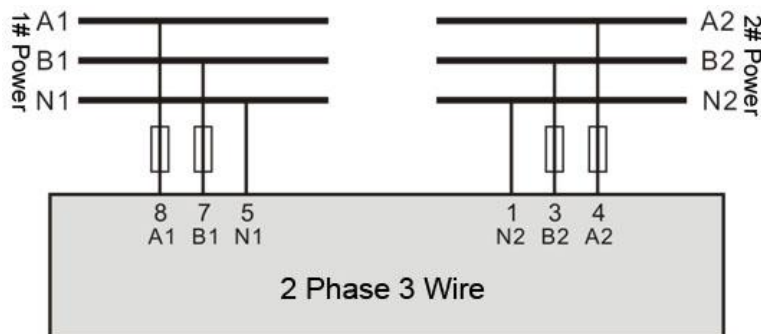


Fig.7 2 Phase 3 Wire Connection

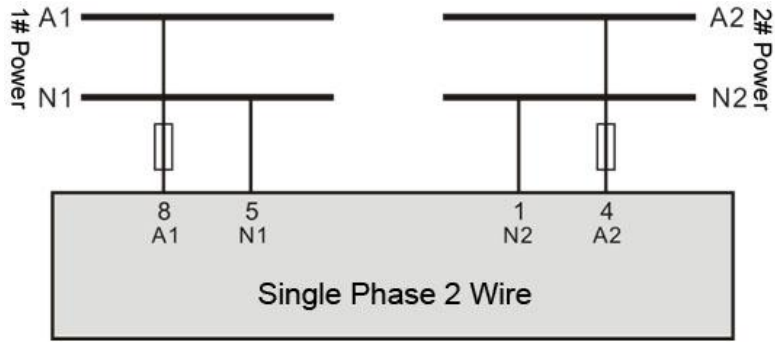


Fig.8 Single Phase 2 Wire Connection

NOTE: The above drawing shows the wiring method is the AC phase voltage of 220V. If the AC phase voltage is 110V in actual use, please contact our technical personnel to confirm the specific wiring method.

SmartGen

10. OVERALL DIMENSION AND PANEL CUTOUT

10.1 CASE DIMENSION

Unit: mm

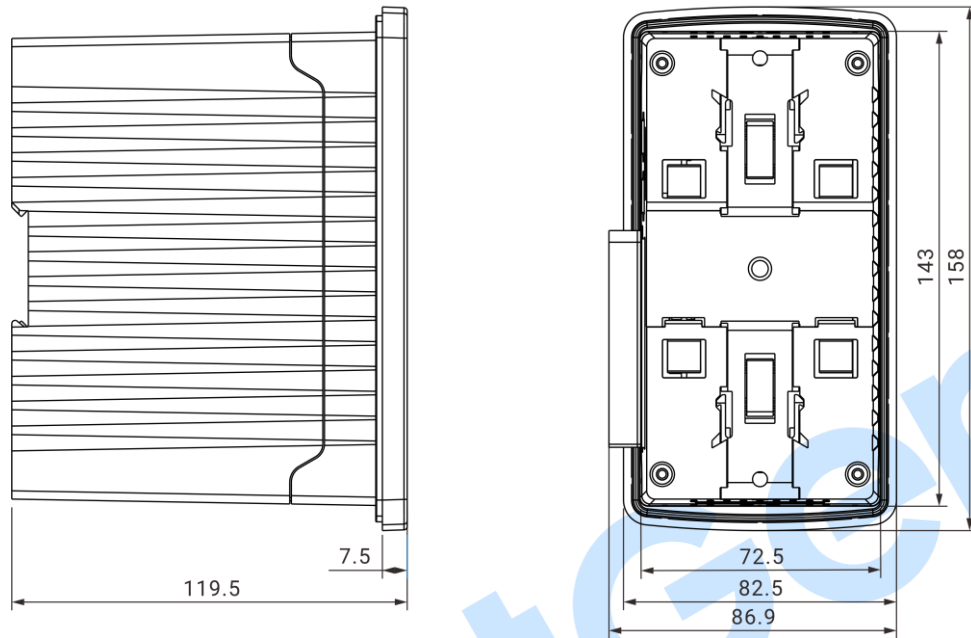


Fig.9 Overall Dimensions

10.2 CUTOUT DIMENSION

The controller has three installation ways: panel built-in, internal 35mm slideway and internal screw mounting. Panel built-in and internal screw mounting are as below:

Unit: mm

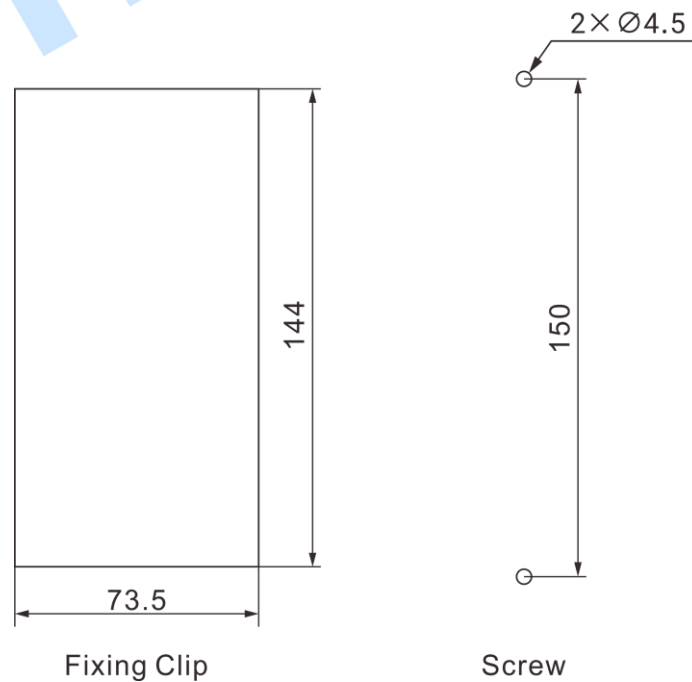


Fig.10 Cutout Dimensions



Fig.11 Panel Built-in Installation

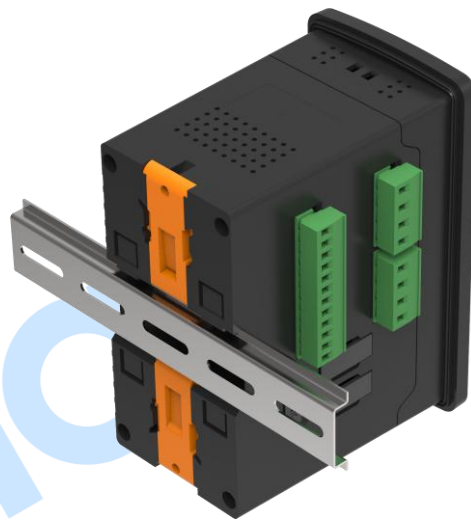


Fig.12 35mm Guide Rail Installation



Fig.13 Screw Installation

11. TROUBLESHOOTING**Tale 9 Troubleshooting**

Symptom	Possible Solutions
Controller no operation	Check connections and voltages of 1# and 2# power; Check F1 or F2 fuse.
Controller displays normal but switch not activate	Check ATS; Check the connections between controller and ATS.
1# or 2# power LED flashes	Check whether AC voltage is normal or not.
Alarm LED flashes	If switch close failure alarms, please check switch auxiliary contact wiring.

SmartGen