



SmartGen
ideas for power

CMM366B-4G/CMM366CAN-4G

CLOUD MONITORING COMMUNICATION MODULE

USER MANUAL



SMARTGEN (ZHENGZHOU) TECHNOLOGY CO., LTD.



Chinese trademark

SmartGen English trademark

SmartGen — make your generator *smart*

SmartGen Technology Co., Ltd.

No.28 Jinsuo Road, Zhengzhou, Henan Province, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Email: sales@smartgen.cn

Web: www.smartgen.com.cn
www.smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.

SmartGen Technology reserves the right to change the contents of this document without prior notice.

Table 1 - Software Version

Date	Version	Note
2020-03-10	1.0	Original release.
2020-05-15	1.1	Fix Fig. 14 Unit from cm to mm.
2020-08-04	1.2	Fix Fig. 6 Link interface communication line according to the real Figure.



CONTENT

1	OVERVIEW	4
2	PERFORMANCE AND CHARACTERISTICS	4
3	SPECIFICATION.....	5
4	PANEL AND TERMINAL DESCRIPTION.....	5
4.1	PANEL INDICATOR AND BUTTONS	5
4.2	GPRS/4G ANTENNA PORT	7
4.3	GPS ANTENNA PORT	7
4.4	SIM INSTALLATION	7
4.5	RS485 PORT	8
4.6	RS232 PORT	8
4.7	LINK PORT	8
4.8	USB HOST.....	9
4.9	USB DEVICE	9
4.10	CAN PORT	10
4.11	TERMINALS	10
5	PROGRAMMABLE PARAMETERS	11
5.1	CONTENTS AND SCOPES OF PARAMETERS.....	11
5.2	PC CONFIGURATION INTERFACE	12
6	SYSTEM DIAGRAM.....	13
7	CASE DIMENSION AND INSTALLATION	13
8	APP INSTALLATION STEPS	15
9	FAULT FINDING	18
10	PACKING LIST.....	18
11	APPENDIX (ORDER MODEL).....	19



1 OVERVIEW

CMM366B-4G/CMM366CAN-4G Cloud Monitoring Communication Module is 4G wireless network communication protocol switching module of global network communication, which can achieve genset (with SCI) connection with Internet. After logging into cloud server, module will receive corresponding genset controller communication protocol from cloud server. Cloud server module can obtain genset data information via RS485, USB, LINK, CAN, or RS232, and send the information to related cloud server via 4G wireless network. Users can at real time monitor genset running status and check genset running records by mobile APP (IOS or Android), or PC etc. terminal device.

It not only can realize genset monitoring, but also can be connected with some digital alarm inputs, to realize monitoring of genset entrance guard, prevention of burglary, fire control etc. ancillary facilities.

It has GPS positioning function, which can upload the obtained longitude and latitude, altitude information at real time to the corresponding cloud server.

CMM366CAN-4G cloud monitoring communication module has CAN port, but CMM366B-4G hasn't. Except for this, these two cloud monitoring communication modules has same functions.

2 PERFORMANCE AND CHARACTERISTICS

- ✧ Connected to cloud server via 4G wireless network, one cloud monitoring module for one genset;
- ✧ Multiple communicating ports with genset control module: RS485, RS232, LINK, CAN, USB (Host); which can monitor most genset control modules of leading brands internationally;
- ✧ Wide power supply: DC (8~35)V, which can directly use genset build-in start battery;
- ✧ With ARM-based 32-bit SCM, high integration of system and strong programming ability;
- ✧ GPS positioning function to obtain genset location information, to realize genset location;
- ✧ Applying network data communication protocol of Json format, upload the genset data changes at real time, meanwhile compression algorithm is applied, which extremely reduces network flow;
- ✧ Immediately upload the data to cloud server when genset alarms occur;
- ✧ Event log memory function, which can ensure data won't get lost when network is not steady;
- ✧ Cloud Modem can be upgraded by 4G signal, convenient for module's maintenance;
- ✧ 2 configurable digital input ports, which can be connected with external alarm signals;
- ✧ Module panel has power and multiple communication status indicators; clear for watching module working status;
- ✧ Lamp test function;
- ✧ Parameter setting function: users can do parameter setting by module USB port;
- ✧ Applying standard π -type 35mm guide-rail installation or screw-fixed installation, and the module can be installed in the genset control box;
- ✧ Modular structure design, flame retardant ABS enclosure, light weight, compact structure with easy installation.

3 SPECIFICATION

Table 2 – Technical Data

Items	Contents
Operating Voltage	DC 8.0V~35.0V, continuous power supply.
Power Consumption	Standby: ≤2W Working: ≤5W
Digital Input	Digital Input, connect (B-) is active.
USB Host	A-type USB female port
RS485	Isolated type
RS232	General type
LINK	SmartGen exclusive port
USB Device	B-type USB female port
CAN Port	Isolated type
GPRS Port	Standard SMA port (female), SMA port (male) for antenna
GPS Port	Standard SMA port (female), SMA port (male) for antenna, active antenna
Wireless Network	LTE-TDD/LTE-FDD/HSPA+/TD-SCDMA/EVDO GSM/GPRS/EDGE
Case Dimensions	72.5mmx105mmx34mm
Working Conditions	Temperature: (-25~+70)°C Humidity: (20~93)%RH
Storage Condition	Temperature: (-30~+80)°C
Weight	0.15kg

4 PANEL AND TERMINAL DESCRIPTION

4.1 PANEL INDICATOR AND BUTTONS

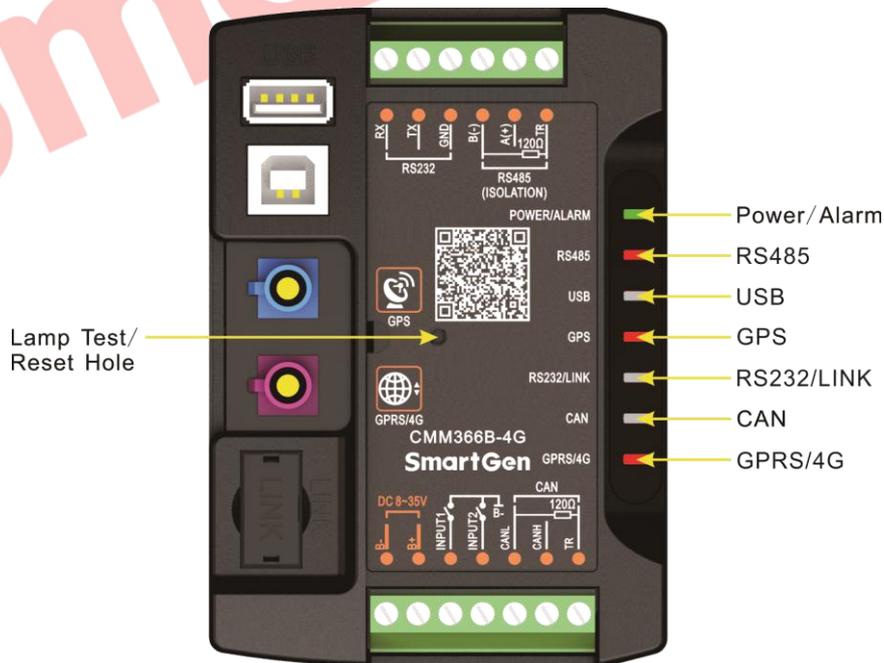


Fig. 1 - Panel Indicator



Table 3 – Indicators Description

Icon	Note
POWER/ALARM	Green LED Light On: Power supply normal indicator; Red LED Light On: Common alarm indicator.
RS485(Red)	Normally Light Off: RS485 disabled; Normally Light On: Communication failed; Flash: Communication normal.
USB(Red)	Normally Light Off: USB(Host) disabled; Normally Light On: Communication failed; Flash: Communication normal.
GPS(Red)	Normally Light Off: GPS disabled; Normally Light On: GPS not gained satellite signal; Flash: GPS gained satellite signal.
RS232/LINK(Red)	Normally Light Off: RS232/LINK Disabled; Normally Light On: Communication failed; Flash: Communication normal.
CAN (Red)	Normally Light Off: CAN disabled; Normally Light On: Communication failed; Flash: Communication normal.
GPRS/4G(Red)	Light Off: 4G module login with server unsuccessfully; Light On: Login with server successfully; Flash: Real-time communication normal.

Lamp test/Reset Button:

Press this button for 1s, all the LEDs are illuminated; press for 10s, recover default configurations of CMM366B-4G/CMM366CAN-4G and all LEDs flash for 3 times.

▲NOTE: After reset the module, parameters need to be re-configured via PC software or mobile APP. Please operate cautiously.

4.2 GPRS/4G ANTENNA PORT

Connect GPRS antenna to GRPR/4G port.
Antenna port: 50Ω/SMA female.

4.3 GPS ANTENNA PORT

GPS enabled, connect GPS antenna to CMM366B-4G/CMM366CAN-4G.

NOTE: GPS antenna needs to be placed to open outdoors, otherwise location information may not be accurate or cannot be gained.

Antenna port: 50Ω/SMA female, active antenna.

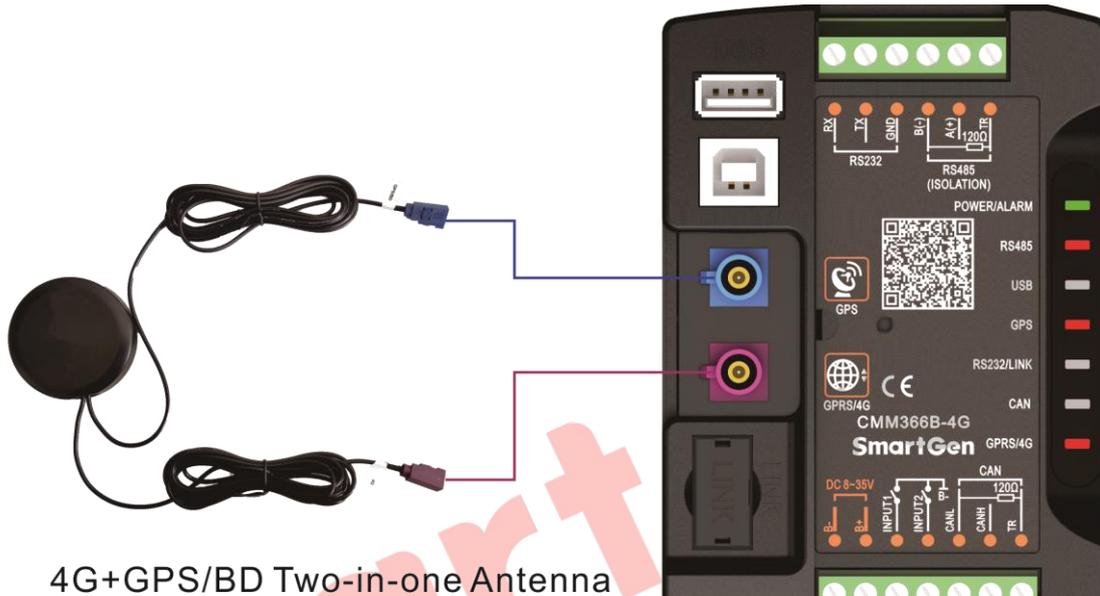


Fig. 2 – CMM366B-4G/CMM366CAN-4G Antenna Connection

NOTE: GPRS antenna and GPS antenna cannot be connected reversely.

4.4 SIM INSTALLATION

Insert 4G SIM card. CMM366B-4G/CMM366CAN-4G will connect to server via wireless mobile network.

NOTE: This module supports 4G wireless network of global network communication. Standard SIM card is applied (size: 25mmx15mm); GPS indicator and GPRS indicator flashing at the same time means SIM card is not inserted or SIM card is in bad contact.

After removing the head cover, the installation steps are as below:

1. Open the top cover.
2. Unlock.
3. Open the SIM slot.
4. Insert the SIM card.
5. Lock the SIM card.
6. Buckle the cover.



Fig. 3 - SIM Card Installation Steps

4.5 RS485 PORT

Receive genset data information by connecting module RS485 port with Genset Controller RS485 port. 120Ω terminal resistor is recommended, and short connect RS485 A(+) and TR terminal.

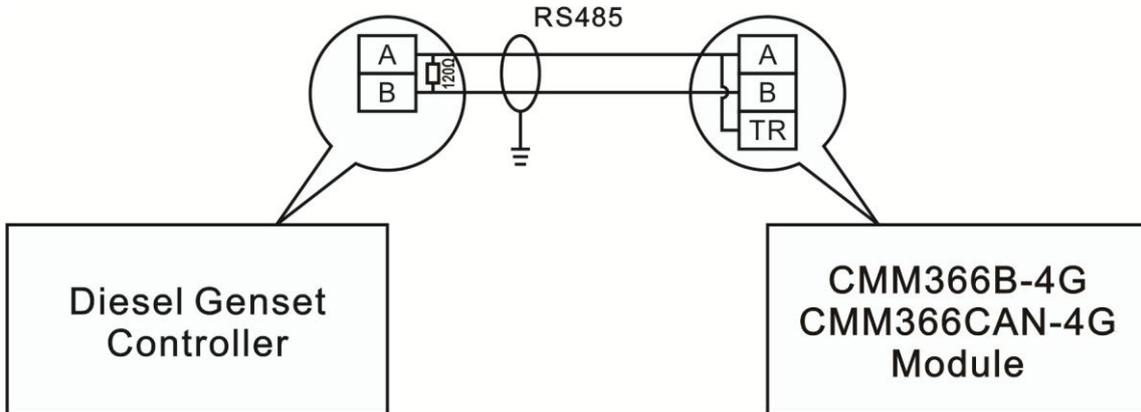


Fig. 4 - RS485 Connection

4.6 RS232 PORT

Receive genset data information by connecting module RS232 port with Genset Controller RS232 port.

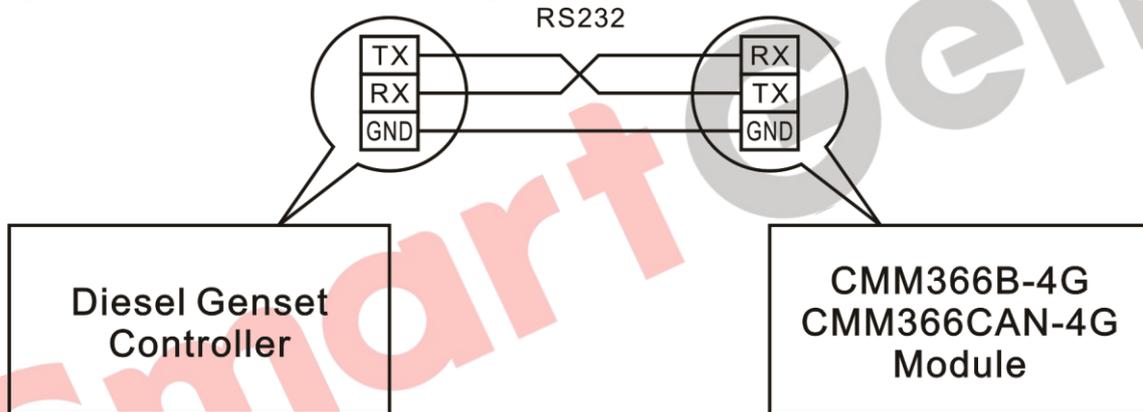


Fig. 5 – RS232 Connection

4.7 LINK PORT

Receive genset data information by connecting module LINK port with Genset Controller LINK port.

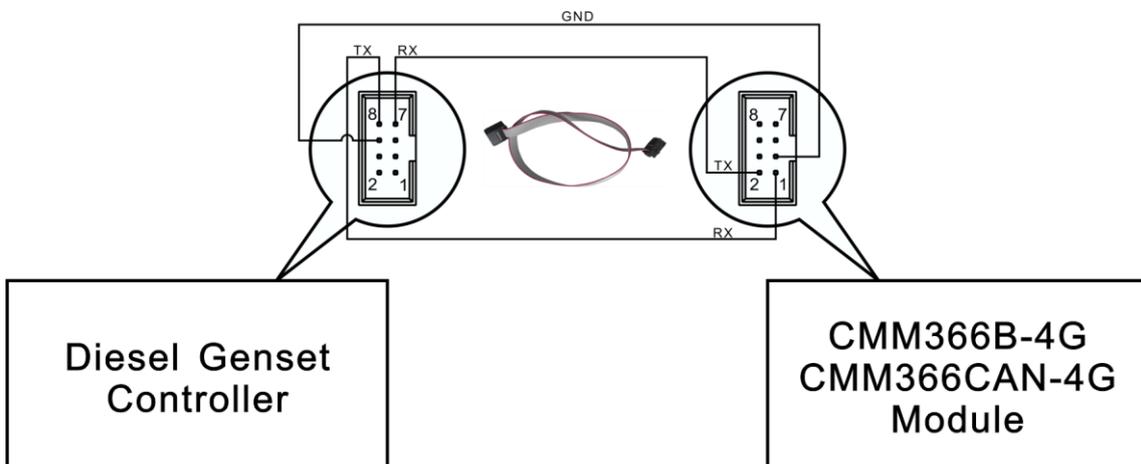


Fig. 6 – LINK Connection

4.8 USB HOST

Receive genset data information by connecting module A-type USB port (female) with Genset Controller USB port via USB cable.

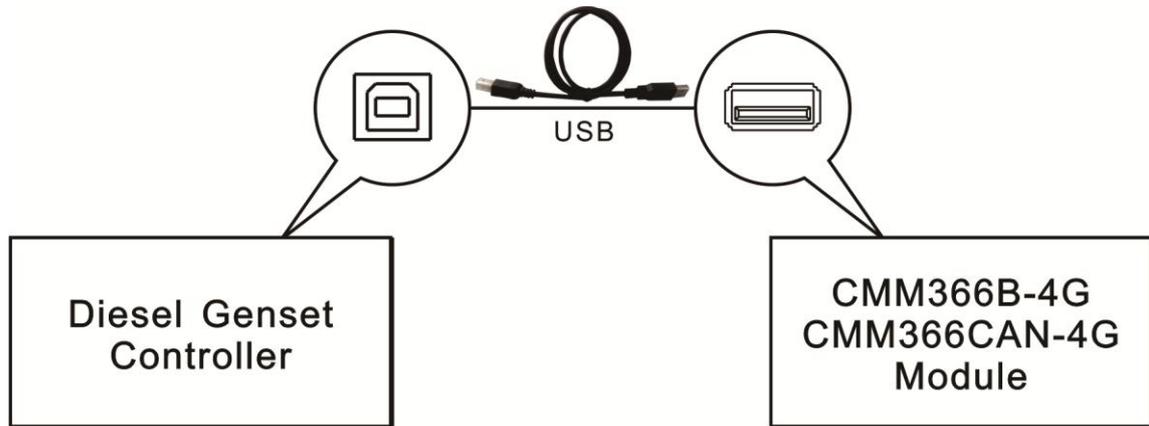


Fig. 7 - USB Host Connection

4.9 USB DEVICE

All the parameters can be configured and view CMM366B-4G/CMM366CAN-4G ID&Login password by connecting USB port with PC.



Fig. 8 – USB Connect PC Device



Fig. 9 - USB Connect SGB100 Module

4.10 CAN PORT

CMM366CAN-4G model has this function. Obtain genset data information by connecting CAN and genset CAN. 120Ω terminal resistor is recommended and short connect CHAH and TR terminal.

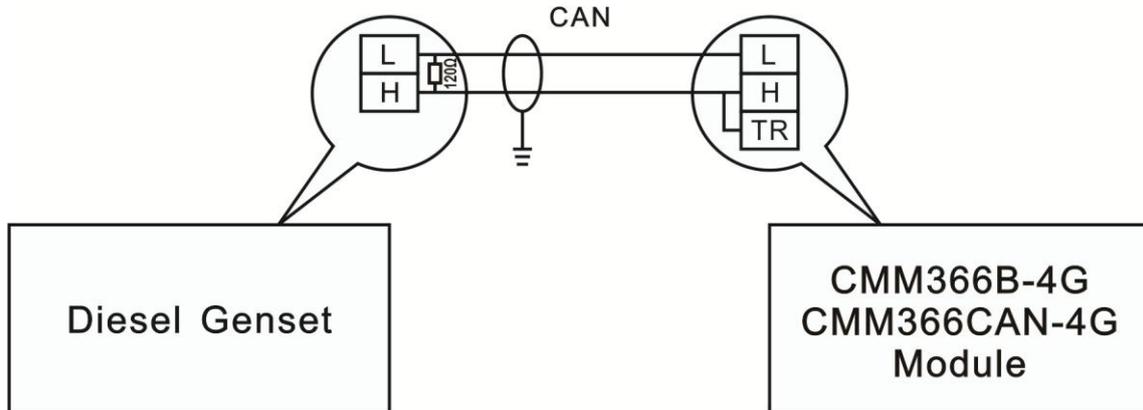


Fig. 10 - CAN Connection

4.11 TERMINALS

Table 4 – Terminals Description

No.	Function	Cable Size	Note
1	B-	1.0mm ²	Connected with negative of starter battery.
2	B+	1.0mm ²	Connected with positive of starter battery. 3A fuse is recommended.
3	Digital Input 1	1.0mm ²	Active when connect to B-.
4	Digital Input 2	1.0mm ²	Active when connect to B-.
5	CANL	0.5mm ²	Impedance-120Ω terminal resistor is recommended, short connect CHAH and TR terminal.
6	CANH	0.5mm ²	
7	TR	0.5mm ²	
8	RS485 B(-)	0.5mm ²	Impedance-120Ω terminal resistor is recommended, short connect RS485 A(+) and TR terminal.
9	RS485 A(+)	0.5mm ²	
10	TR	0.5mm ²	
11	RS232 RX	0.5mm ²	RS232 port
12	RS232 TX	0.5mm ²	
13	RS232 GND	0.5mm ²	



5 PROGRAMMABLE PARAMETERS

5.1 CONTENTS AND SCOPES OF PARAMETERS

Table 5 – Parameter Content & Scope

No.	Items	Parameters	Defaults	Description
Gateway				
1	Site Name			20 Chinese characters, letters or numbers
2	URL		www.monitoryun.com	40 characters
3	Server Port	(0-65535)	91	
4	Security Code		123456	16 characters
GPS				
1	GPS Enabled	(0-1)	1	0: Manual Input 1: GPS Location
2	Longitude	((-180)-180)°	113.554879	GPS location, altitude information
3	Latitude	((-90)-90)°	34.802335	
4	Altitude	((-9999.9)-9999.9)m	100.0	
Digital Inputs				
Digital Input 1				
1	Setting	(0-9)	0	Default: Not used
2	Type	(0-1)	0	0:Active when close 1:Active when open See: <i>Table 6 – Digital Input Ports Content</i>
3	Delay	(0-20.0)	0.0	Action delay
Digital Input 2				
1	Setting	(0-9)	1	Default: Lamp test
2	Type	(0-1)	0	0:Active when close 1:Active when open See: <i>Table 6 – Digital Input Ports Content</i>
3	Delay	(0-20.0)	0.0	Action delay

NOTE: Configuration of monitoring genset controller model, communication port, communication baud rate, and communication ID need to be set on the platform, and monitoring module need to restart up after all parameters being set.



Table 6 – Digital Input Ports Content

No.	Item	Description
0	Not Used	Not used.
1	Lamp Test	All the indicators are illuminated when input is active.
2	Remote Control Inhibited	Cloud start/stop control is prohibited when input is active.
3	Access Alarm Input	Access alarm is uploaded to server when input is active.
4	Fire Alarm Input	Fire alarm is uploaded to server when input is active.
5	Alarm Input	External alarm is uploaded to server when input is active.
6	Reserved	
7	Reserved	
8	Reserved	
9	Factory Test Mode	It is only used for factory test when active.

5.2 PC CONFIGURATION INTERFACE

Connecting the USB port of CMM366B-4G/CMM366CAN-4G communication module with PC to configure the parameters.

Gateway

Site Name

Server Url

Server Port (0-65535)

Security Code

Fig. 11 - Gateway Configuration

Monitoring

Satellite Num. 3 Altitude 97.1

Longitude 113.557854 Hardware Ver. V 1.2

Latitude 34.800999 Software Ver. V 1.0

Input 1

Input 2

Issue Date 2020-03-10

Module Time 2020-04-22(3) 15:01:11

Module ID

Fig. 12 - Module Monitoring Interface

6 SYSTEM DIAGRAM

One CMM366B-4G/CMM366CAN-4G module connects with one genset monitor module. It can be connected via RS485 port, LINK port, CAN port, RS232 port or USB port.

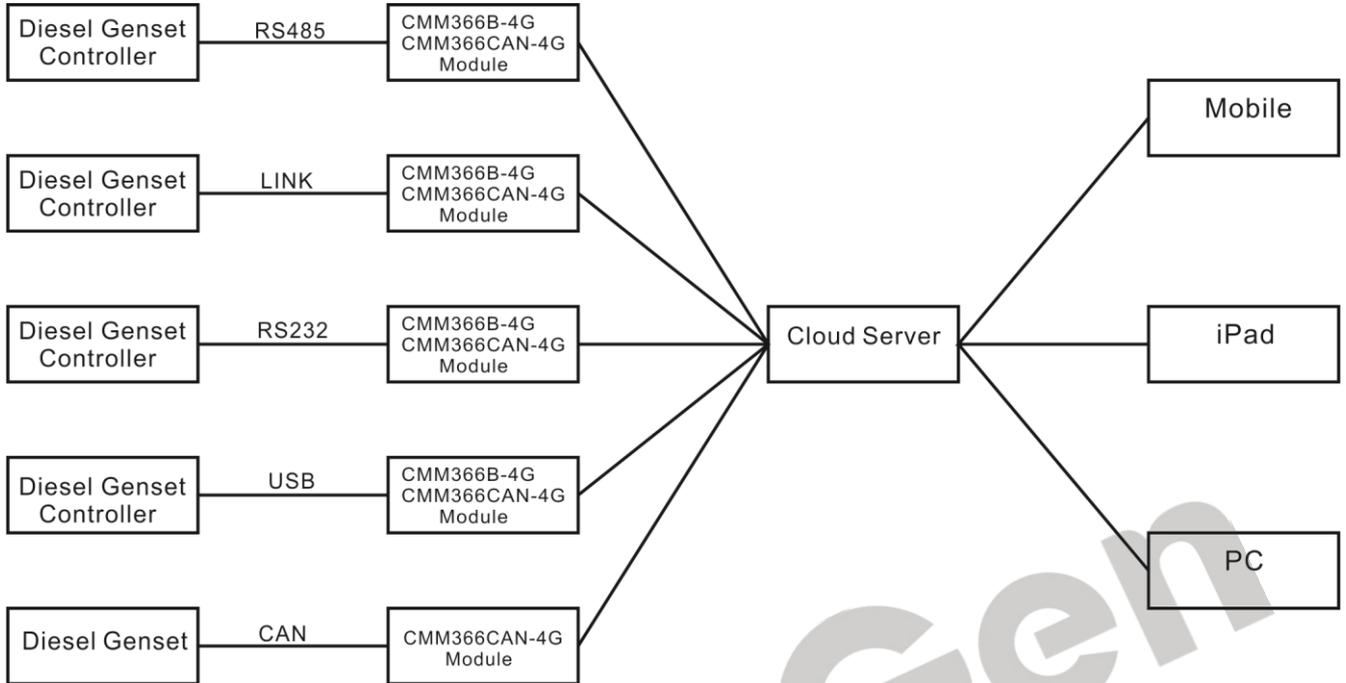


Fig. 13 - CMM366B-4G/CMM366CAN-4G System Diagram

7 CASE DIMENSION AND INSTALLATION

35mm guide rail installation or screw-fixed (M4) installation can be applied. Case dimensions are as below:

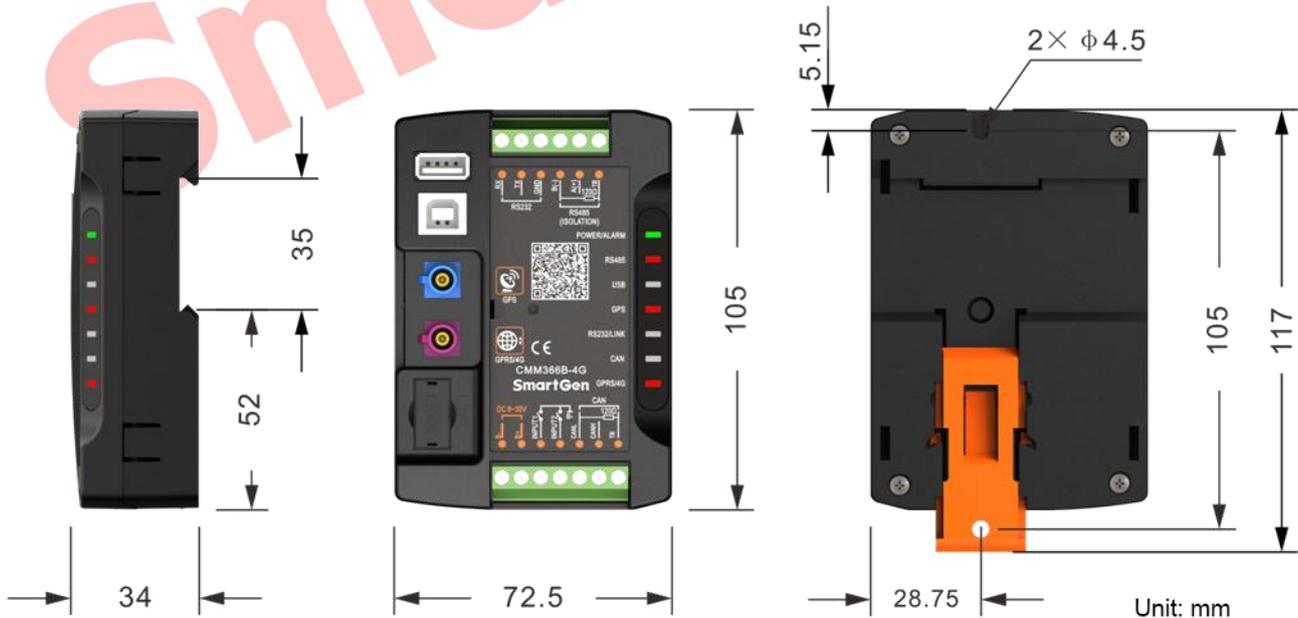


Fig.14 - CMM366B-4G/CMM366CAN-4G Case Dimension

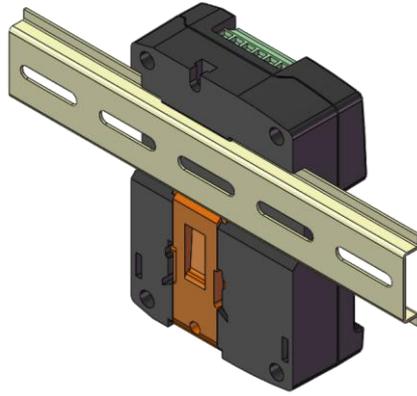


Fig.15 - CMM366B-4G/CMM366CAN-4G Guide Rail Installation

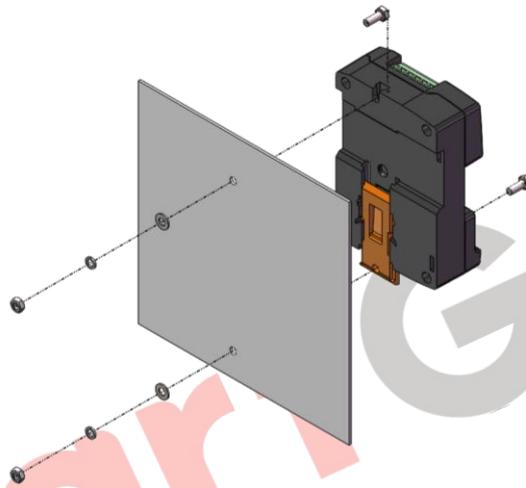


Fig.16 - CMM366B-4G/CMM366CAN-4G Screw Installation

8 APP INSTALLATION STEPS



Fig. 17 - APP Download QR Code

- 1) Scan the QR code on the enclosure of CMM366B-4G/CMM366CAN-4G cloud monitoring communication module (QR code is as Fig. 17), download the APP and install it in the mobile, or search "tesilayun", download and install in the mobile.
- 2) Open "tesilayun" APP from the mobile, users have to register for the first time of using it, after register input Account Number and Password to enter APP.

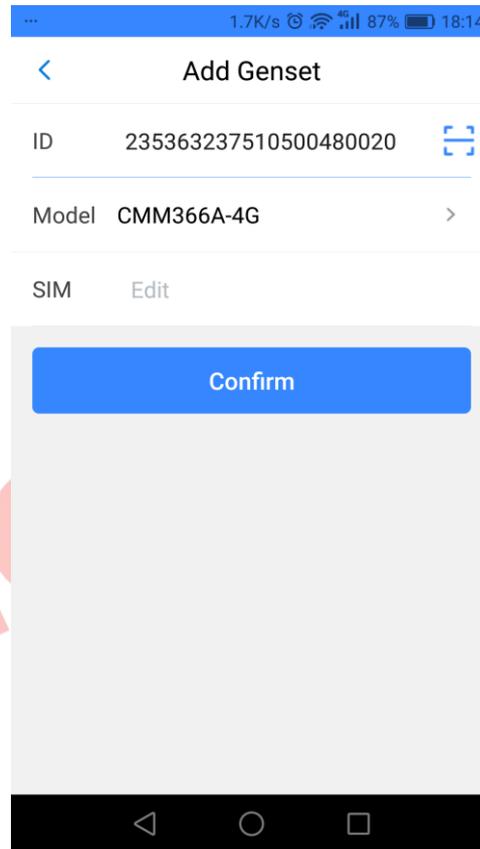


Fig. 18 - Add Genset Interface Screenshot

- 3) Open "tesilayun" APP from the mobile, choose "Add Genset" interface, scan the QR code on the Modem and add Modem ID, or manually input Modem ID (as Fig. 12's Module ID), choose Modem type, click Confirm, and it is OK as Fig. 18.

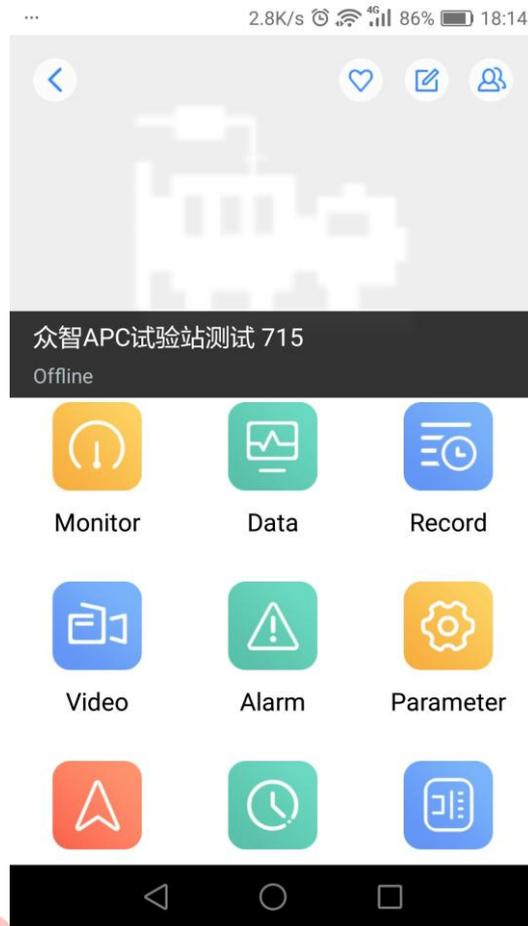


Fig. 19 - Genset Control Interface

- 4) Search the added Modem ID in the list, click and enter interface as Fig. 19.

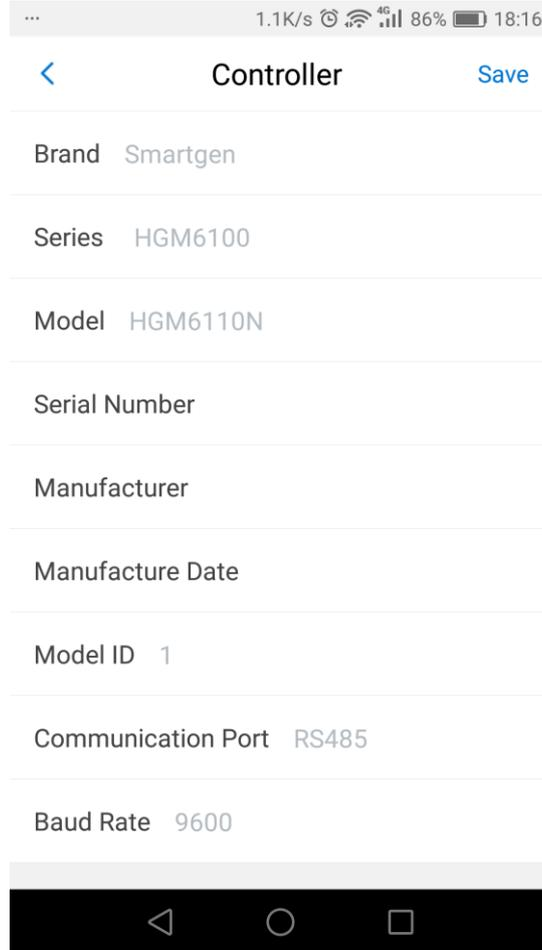


Fig. 20 - Controller Interface

- 5) Click the Icon  in Fig. 19, enter "Edit Genset Profile", mainly configure controller information as Fig. 20, such as controller brand, controller series, controller model, model ID, Communication Port, Baud Rate etc. Click Save after setting. Users can obtain controller genset information by clicking the function icons in Fig. 19.

9 FAULT FINDING

Table 7 – Fault Finding

Symptoms	Possible Solutions
Controller no response with power.	Check power voltage; Check module connection wirings.
GPRS/4G Indicator Not Light	Check SIM card is inserted or not; Check GPRS antenna is connected or not.
GPS Not Gained Location	Check GPS parameters are enabled or not; Check GPS antenna is connected or not and placed outdoor or not.
RS485 Communication Abnormal	Check connections; Check RS485 port is enabled or not on cloud server platform communication port; Check settings of genset ID and baud rate are correct or not. Check RS485's connections of A and B is reversely connected or not.
RS232 Communication Abnormal	Check connections; Check RS232 port is enabled or not on cloud server platform communication port; Check settings of genset ID and baud rate are correct or not.
LINK Communication Abnormal	Check connections; Check LINK port is enabled or not on cloud server platform communication port; Check settings of genset ID and baud rate are correct or not.
CAN Communication Abnormal	Check connections; Check CAN is enabled or not on cloud server; Check communication baud rate is correctly set or not; Check CANL and CANH are reversely connected or not. Check genset controller ID is correct or not.
USB (Host) Communication Abnormal	Check connections; Check USB is enabled or not on cloud server platform communication port. Check genset controller ID is correct or not.

10 PACKING LIST

Table 8 - Packing List

No.	Name	Quantity	Remark
1	Cloud Monitoring Module	1	CMM366CAN-4G (with CAN port) CMM366B-4G (without CAN port)
2	4G+GPS/BD Two-in-one Antenna	1	
3	Certification	1	
5	User manual	1	
6	SIM Card Tray	1	
7	RS485 Communication Cable	1	Length: 50cm



11 APPENDIX (ORDER MODEL)

Table 9 - CMM366B-4G/CMM366CAN-4G Order Model

Order Model	Country/Area	Frequency Band	Remark
CMM366B-4G CMM366CAN-4G	Chinese Mainland	FDD-LTE: B1/B3/B8 TDD-LTE: B38/B39/B40/B41 TD-SCDMA: B34/B39 WCDMA: B1/B8 EVDO/CDMA: BC0 GSM: 900/1800MHz	
CMM366B-4G-S01 CMM366CAN-4G-S01	North America	FDD-LTE: B2/B4/B12 WCDMA: B2/B5	
CMM366B-4G-S04 CMM366CAN-4G-S04		FDD-LTE: B2/B4/B5/B13	
CMM366B-4G-S02 CMM366CAN-4G-S02	Europe/Africa/ Korea/Thailand/ Middle East	FDD-LTE: B1/B3/B5/B7/B8/B20 TDD-LTE: B38/B40/B41 WCDMA: B1/B5/B8 GSM: 900/1800MHz	
CMM366B-4G-S03 CMM366CAN-4G-S03	South America/ Australia/ New Zealand	FDD-LTE: B1/B2/B3/B4/B5/B7/B8/B28 TDD-LTE: B40 WCDMA: B1/B2/B5/B8 GSM: 850/900/1800/1900MHz	
CMM366B-4G-S05 CMM366CAN-4G-S05	Japan	FDD-LTE: B1/B3/B8/B18/B19/B26	

